



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
-/--	-/--
REVEAL	
SIZE	
SUB. P.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV. CH.	FAV
HOLD	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+ 
SUB. T.	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
T. SHIFT	SHIFT+SLEEP
INDEX	SHIFT+INFO
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

