



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
A-B	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
NOT USED	/ AV
+10	-/--
GOTO	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT CHAP	P+
SKIP PREV CHAP	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
NOT USED	SLEEP
VIDEO	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
OSD	EPG
RAN	FAV
OPEN/CLOSE	
SLOW	
STOP	
PROG	RED
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PBC	SHIFT+1
R/L	SHIFT+2
NP	SHIFT+3
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
ANGLE	SHIFT+FAV

