



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
SUBPAGE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV.	FAV
AUTO	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
AUDIO	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
USB – MEDIA	SHIFT+6
NICAM / A2	SHIFT+ -/--
REVEAL	SHIFT+
P. SIZE	SHIFT+
SUBTITLE	SHIFT+
USB – VOL-/+	SHIFT+ VOL-/+
USB – SKIP PRE./NEXT	SHIFT+ P-/+
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT
USB – STOP	SHIFT+
USB – REC/PVR	SHIFT+RED
USB – REW	SHIFT+GREEN
USB – PLAY/PAUSE	SHIFT+YELLOW
USB – FWD	SHIFT+BLUE

