



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / TV	/ SOURCE
-/--	-/--
DISPLAY	
PIC SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
STILL	
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
DTV MENU	SHIFT+MENU
CANCEL	SHIFT+EXIT
PIP	SHIFT+1
P. INPUT	SHIFT+
S. INPUT	SHIFT+ -/--
REVEAL	SHIFT+
SIZE	SHIFT+
SUBPAGE	SHIFT+
SUBTITLE	SHIFT+
P. POSITION	SHIFT+BACK
SURROUND	SHIFT+SLEEP
NICAM / A2	SHIFT+TV/DTV
INDEX	SHIFT+INFO
P. MODE	SHIFT+EPG
S. MODE	SHIFT+FAV

