



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	AV
-/--	-/--
DISPLAY	
PIC. SIZE	
MIX	
TEXT	
VOL -/+	VOL -/+
CH -/+	P -/+
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG
FAV	FAV
AUTO	
STILL	
HOLD	

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
AUDIO	SHIFT+MUTE
SYSTEM	SHIFT+MENU
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
NICAM / A2	SHIFT+3
PVR – MEDIA	SHIFT+6
DVB SOURCE	SHIFT+AV
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
SUBTITLE	SHIFT+ 
FAV -/+	SHIFT+ LEFT/RIGHT
SUB PAGE	SHIFT+DOWN
PVR – VOL -/+	SHIFT+ VOL-/+
PVR – SKIP PRE./NEXT	SHIFT+ P-/+
INDEX	SHIFT+INFO
PVR – STOP	SHIFT+ 
PVR – REC	SHIFT+RED
PVR – REW	SHIFT+GREEN
PVR – PLAY/PAUSE	SHIFT+YELLOW
PVR – FWD	SHIFT+BLUE

