



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ SOURCE
-/--	-/--
DISPLAY	
P. SIZE	
P. MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
MEDIA	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
AUDIO	SHIFT+MUTE
NICAM / A2	SHIFT+
SUBTITLE	SHIFT+
FAV+	SHIFT+ VOL+
FAV -	SHIFT+ VOL -
SKIP NEXT / SIZE	SHIFT+ P+
SKIP PREV / HOLD	SHIFT+ P -
TV / RADIO	SHIFT+ TV/DTV
S. MODE	SHIFT+INFO
STOP	SHIFT+
REC / PVR	SHIFT+RED
REW / SUBPAGE	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / REVEAL	SHIFT+BLUE

