

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
USB / MEDIA	-/--
DISPLAY	
SIZE	
S. MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
 / SLEEP	SLEEP
RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO	 / NET TV
FREEZE	
HOLD	 / SMART
RED / GOTO	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
AUDIO	SHIFT+MUTE
REVEAL	SHIFT+ 
P. SIZE	SHIFT+ 
P. MODE	SHIFT+ 
S. TITLE	SHIFT+ 
FAV+	SHIFT+ VOL+
FAV -	SHIFT+ VOL -
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
S. PAGE	SHIFT+EPG
NICAM	SHIFT+FAV
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

