



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TV MENU	MENU
TV EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVB	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
PICTURE	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV/AV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
DVB MENU	SHIFT+MENU
DVB EXIT	SHIFT+EXIT
NICAM	SHIFT+1
REVEAL	SHIFT+
TV FORMAT	SHIFT+
TV/TXT	SHIFT+
CANCEL	SHIFT+BACK
SUBPAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
DVB INFO	SHIFT+INFO
INDEX	SHIFT+EPG
LANGUAGE	SHIFT+FAV
FREEZE	SHIFT+

