



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / SOURCE
0000	-/--
MONITOR	
TEXT	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SL/LP	TV/DTV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SKIP NEXT	SHIFT+ P+

[illegible]