



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
HDMI	-/--
DISPLAY	
INSTANT SKIP	
SUBTITLE	
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TIME SLIP	SLEEP
SAT LINK	TV/DTV
INFO	INFO
GUIDE	EPG
DUBBING	FAV
OPEN/CLOSE	 / NET TV

ORIGINAL	SUPERIOR
PAUSE	 / SMART TUBE
STOP	 / SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TOP MENU	SHIFT+MENU
VCR	SHIFT+1
DVD	SHIFT+2
TIMER SET	SHIFT+3
TIMER PROG	SHIFT+4
1.3/0.8 PLAY	SHIFT+5
SETUP	SHIFT+ 
TEXT	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REC MODE	SHIFT+FAV
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW / MODE	SHIFT+YELLOW
BLUE / SEARCH	SHIFT+BLUE

