



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
1/2/3 / DISC 1/2/3	1/2/3
4/5 / DISC 4/5	4/5
6	6
7 / ANGLE	7
8	8
9 / NIGHT DVD	9
0 / --	0
AUX 1 / SAT/CABLE	AV
AUX 2 / VCR	
DVD / CD	
TUNER	
TV	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK

ORIGINAL	SUPERIOR
SLEEP	SLEEP
PLAY MODE	TV/DTV
PAUSE	
STOP	
REC / ZOOM	RED
REV.	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PR-	SHIFT+ P-
PR+	SHIFT+ P+
TUNER-	SHIFT+DOWN
TUNER+	SHIFT+UP
PURPLE / BASS	SHIFT+
RED / DSP.	SHIFT+RED
GREEN / EQUALIZER	SHIFT+GREEN
YELLOW / INFO	SHIFT+YELLOW
BLUE / TITLE/GUIDE	SHIFT+BLUE

