



ORIGINAL	SUPERIOR
	POWER
MENU / A	MENU
EXIT / STATUS / E	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
CASS / B	-/--
- <	P+
> +	P -
PROG / C	SLEEP
SP/LP	TV/DTV
0000	INFO
MEM / D	EPG
INDEX	FAV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE

