



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
SIZE	
MIX	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
ASPECT	 / NET TV
STOP	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
REC. MENU	SHIFT+MENU
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA	SHIFT+6
LIST	SHIFT+ -/--
REVEAL	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUB. / SUBPAGE	SHIFT+DOWN
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

