



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
CANCEL / ZOOM	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
-/--	-/--
MIX / LANGUAGE	
TXT / REPEAT	
VOL +/-	VOL +/-
CH +/-	P +/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENT.	OK
	BACK
ASPECT	SLEEP
DVB / RADIO	TV/DTV
NICAM	INFO
EPG / SLOW	EPG
CH. GROUP	FAV
STILL	
HOLD / A - B	/ SMART

ORIGINAL	SUPERIOR
RED	RED
GREEN / GO TO	GREEN
YELLOW / ANGLE	YELLOW
BLUE / D. DIS	BLUE
PVR MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA	SHIFT+6
CH. EDIT	SHIFT+ -/--
REVEAL / TITLE	SHIFT+
DVD MENU / SIZE	SHIFT+
SUBTITLE / SUBPAGE	SHIFT+
FAV+	SHIFT+ V+
FAV -	SHIFT+ V -
SKIP PREV. / PAGE+	SHIFT+ P+
SKIP NEXT / PAGE -	SHIFT+ P -
DVD SETUP / INDEX	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

