



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT / TITLE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
P – MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
MEDIA	TV/DTV
S – MODE	INFO

ORIGINAL	SUPERIOR
TVG / D. MENU	EPG
FAV	FAV
HOLD / FREEZE	 / SMART VIDEO
RED / GO TO	RED
GREEN / ANGLE	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
AUDIO / LANG	SHIFT+MUTE
ZOOM / SIZE	SHIFT+ 
D. SETUP / REC	SHIFT+ 
SUBTITLE	SHIFT+ 
SUBPAGE	SHIFT+DOWN
TV / RADIO	SHIFT+ TV/DTV
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
SKIP NEXT / INDEX	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

