



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
 / DTV/RADIO	
TEXT	
V+	V+
V -	V -
P+	P+
P -	P -
DOWN	DOWN
UP	UP
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
SLEEP	SLEEP
INFO	INFO
GUIDE	EPG
 / FAV CH	FAV
JUMP	 / NET TV
 / PVR	 / SMART VIDEO

ORIGINAL	SUPERIOR
RED / D. SETUP	RED
GREEN / REPEAT	GREEN
YELLOW / ZOOM	YELLOW
BLUE / GO TO	BLUE
AUDIO / I/II	SHIFT+MUTE
DVD MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
 / USB	SHIFT+  / SOURCE
P. SIZE	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

