



| ORIGINAL  | SUPERIOR  |
|-----------|-----------|
|           | POWER     |
|           | MUTE      |
| MENU      | MENU      |
| EXIT      | EXIT      |
| 1/2/3/4/5 | 1/2/3/4/5 |
| 6/7/8/9/0 | 6/7/8/9/0 |
| HDMI      | / AV      |
| REC. LIST | -/--      |
| RATIO     |           |
| SUB.      |           |
| TEXT      |           |
| VOL+      | VOL+      |
| VOL-      | VOL-      |
| CH+       | P+        |
| CH-       | P-        |
| UP        | UP        |
| DOWN      | DOWN      |
| LEFT      | LEFT      |
| RIGHT     | RIGHT     |
| OK        | OK        |
| / BACK    | BACK      |
| SLEEP     | SLEEP     |
| TV / RAD. | TV/DTV    |
| INFO      | INFO      |
| EPG       | EPG       |

| ORIGINAL   | SUPERIOR     |
|------------|--------------|
| FAV        | FAV          |
| RED        | RED          |
| GREEN      | GREEN        |
| YELLOW     | YELLOW       |
| BLUE       | BLUE         |
| AUDIO      | SHIFT+MUTE   |
| ---        | SHIFT+ -/--  |
| SKIP PREV. | SHIFT+ P-    |
| SKIP NEXT  | SHIFT+ P+    |
| PAGE -     | SHIFT+DOWN   |
| PAGE -     | SHIFT+UP     |
| / TIMER    | SHIFT+SLEEP  |
| PAUSE      | SHIFT+       |
| STOP       | SHIFT+       |
| REC        | SHIFT+RED    |
| REW        | SHIFT+GREEN  |
| PLAY       | SHIFT+YELLOW |
| FWD        | SHIFT+BLUE   |
|            |              |
|            |              |
|            |              |
|            |              |
|            |              |
|            |              |
|            |              |
|            |              |
|            |              |

