



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUX	/ SOURCE
V. FORMAT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/LIST	OK
	BACK
	TV/DTV
i	INFO
GUIDE	EPG
FAV	FAV
	/ NET TV
RED /	RED

ORIGINAL	SUPERIOR
GREEN /	GREEN
YELLOW /	YELLOW
BLUE /	BLUE
	SHIFT+POWER
	SHIFT+MUTE
SAT	SHIFT+7
	SHIFT+
STEP	SHIFT+LEFT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

