



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/RADIO	TV/DTV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
GUIDE	EPG
INFO	INFO
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -

[illegible]