



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
DISPLAY	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
ATV/DTV	TV/DTV
INDEX	INFO
GUIDE	EPG
FAV LIST	FAV
ASPECT	/ NET TV

ORIGINAL	SUPERIOR
FREEZE	/ SMART TUBE
HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
MTS	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
SUB. PG	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TIMESHIFT	SHIFT+SLEEP
TV/RADIO	SHIFT+ TV/DTV
REC LIST	SHIFT+EPG
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

