



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU / DVD MENU	MENU
EXIT / RETURN	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
SET UP / TV/FAV RAD.	
TEXT / AUDIO	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
i+ /	INFO
A/D / CONTENT MENU	EPG
	/ NET TV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
	SHIFT+MUTE
TOP MENU / GUIDE	SHIFT+MENU
	SHIFT+
	SHIFT+
	SHIFT+
SUBTITLE	SHIFT+
	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT	SHIFT+
PAUSE / STEP	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

