



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
DIGITAL MENU	MENU
EXIT / CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
JUMP	-/--
ZOOM / CH. RTN.	
ANGLE	
VOL+	VOL+
VOL -	VOL -
CH/PAGE +	P+
CH/PAGE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER / CH. LIST	OK
RETURN	BACK
SLEEP	SLEEP
ATV / DTV	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
MARKER	FAV
PIC. SIZE	
RED / SLOW	RED
GREEN	GREEN
YELLOW / PLAY MODE	YELLOW
BLUE / SLOW	BLUE
AUDIO SELECT	SHIFT+MUTE
DVD MENU	SHIFT+MENU
TOP MENU	SHIFT+EXIT
TV / DVD	SHIFT+ /AV
	SHIFT+
	SHIFT+
MENU SETUP	SHIFT+
SUBTITLE	SHIFT+
SKIP PREV./NEXT	SHIFT+ P- / +
REPEAT A-B	SHIFT+BACK
/	SHIFT+SLEEP
TV / RADIO	SHIFT+ TV/DTV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REV.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
F.F.	SHIFT+BLUE

