



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	TV / SOURCE
	-/--
SETUP	
TEXT / ANGLE	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
	SLEEP
ATV / DTV	TV/DTV
	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
TOP MENU	FAV
RED / ZOOM	RED
GREEN / REPEAT	GREEN
YELLOW / ROOT	YELLOW
BLUE / TITLE	BLUE
	SHIFT+MUTE
DVD / MENU	SHIFT+MENU
AD	SHIFT+
	SHIFT+
JUMP	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
QUICK	SHIFT+BACK
TV / DVD	SHIFT+TV/DTV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

