



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
C	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
HDMI CONTROL	-/-- / BACK
TXT	TXT
VOL+	VOL+
VOL-	VOL-
CH+	CH+
CH-	CH-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLEEP	SLEEP
INFO	i

ORIGINAL	SUPERIOR

