



ORIGINAL	SUPERIOR
CD/DVD STANDBY	POWER
AMP MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
+10	-/--
DISPLAY	
PBC	
ANGLE	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
N/P	TV/DTV
AUTOSCAN	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
VOCAL	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
R2/R3 STANDBY	SHIFT+POWER
AUDIO	SHIFT+MUTE
VOLUME MENU	SHIFT+MENU
AM/FM	SHIFT+ -/--
DISPLAY	SHIFT+
ZOOM	SHIFT+
SETUP	SHIFT+
RDS PTY	SHIFT+
VOL+/-	SHIFT+ VOL+/-
CHANNEL+/-	SHIFT+ P+/-
TUNING+/-	SHIFT+UP/DOWN
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
A – B	SHIFT+TV/DTV
TITLE	SHIFT+INFO
MEMORY	SHIFT+EPG
ST/MO	SHIFT+FAV

