



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TV MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
-/--	-/--
DISPLAY	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
AUTO	
HOLD	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / NICAM	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
SUBPAGE	SHIFT+DOWN
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

