



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
SUBPAGE / TITLE	
TV / TXT / LANGUAGE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV/RADIO / GOTO	TV/DTV
DVD – SETUP	INFO

ORIGINAL	SUPERIOR
INDEX / ANGLE	EPG
FAV / ZOOM	FAV
PICTURE	/ NET TV
HOLD	/ SMART
RED / PROGRAM	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
SOUND	SHIFT+MUTE
AUDIO / MENU	SHIFT+MENU
SUBTITLE / D – SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

