



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
ECHO	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
10+	-/--
OSD	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT/CH+	P+
SKIP PREV/CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLOW	SLEEP
TV - MODE	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG	EPG
A - B	FAV
OPEN/CLOSE	/ NET TV
STOP	/ SMART
REW/FINE -	GREEN
PLAY/PAUSE	YELLOW
FWD/FINE+	BLUE
AUDIO	SHIFT+MUTE
AUTO SEARCH	SHIFT+EXIT
USB	SHIFT+
CH LEVEL	SHIFT+ -/--
V - MODE	SHIFT+
ZOOM	SHIFT+
ANGLE	SHIFT+
S - EFFECT	SHIFT+
TONE	SHIFT+SLEEP
MO/ST	SHIFT+TV/DTV

