



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
SOUND	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BAND / REPEAT DISC	 / SOURCE
+10	-/--
DISPLAY	
DIMMER	
ANGLE	
FUNCTION	
VOL +	VOL +
VOL -	VOL -
SKIP NEXT	P +
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
MEMORY	EPG
DOLBY PRO LOGIC	FAV
OPEN/CLOSE	 / NET TV

[illegible]