



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TV MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
10+ / ASPECT	-/--
DISPLAY	
P. MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RAD. / SLOW/STEP	TV/DTV
INDEX	INFO
EPG / GO TO	EPG

ORIGINAL	SUPERIOR
FAV / D. MENU	FAV
AUTO	 / NET TV
HOLD	 / SMART
RED / D. SETUP	RED
GREEN / A-B	GREEN
YELLOW / REPEAT	YELLOW
BLUE / ANGLE	BLUE
S. MODE	SHIFT+MUTE
MEDIA	SHIFT+6
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
NICAM / AUDIO	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE	SHIFT+DOWN
FAV - / PROG	SHIFT+LEFT
FAV+ / ZOOM	SHIFT+RIGHT
TITLE	SHIFT+INFO
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

