



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
/ DISPLAY	
SIZE / SUBTITLE	
MIX / FAV. LIST	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RECALL	BACK
TV / RADIO	TV/DTV
INDEX	INFO
SUBPAGE	FAV
FREEZE	/ SMART TUBE

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
CANCEL / AUDIO	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL	SHIFT+
ZOOM	SHIFT+
HOLD	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

