



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
-/--	-/--
DISPLAY	
ASPECT	
T. SHIFT	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DTV	TV/DTV
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
AUTO	/ NET TV
FREEZE	/ SMART TUBE
HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
NICAM / A2	SHIFT+3
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
S. PAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TV / RADIO	SHIFT+ TV/DTV
INDEX	SHIFT+INFO
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

