



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
SUBPAGE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
P.MODE	INFO

ORIGINAL	SUPERIOR
S.MODE	EPG
FAV	FAV
HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
INDEX	SHIFT+INFO
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

