



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
	-/--
/ DISPLAY	
SIZE	
SUBOAGE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
USB	TV/DTV
/ MOUSE	INFO

ORIGINAL	SUPERIOR
INDEX	EPG
FAV	FAV
NETFLIX	/ NET TV
HOLD	
YOUTUBE	/ SMART
RED / A	RED
GREEN / B	GREEN
YELLOW / C	YELLOW
BLUE / D	BLUE
REVEAL	SHIFT+
P.MODE	SHIFT+
S.MODE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

