



ORIGINAL	SUPERIOR
	POWER
X	MUTE
MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
/ ARCHIVE	
OPTION	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TV/R / LIVE	TV/DTV
i	INFO
EPG	EPG
MODE	FAV
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
F1	SHIFT+1
F2	SHIFT+2
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

