



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
A/B	-/--
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TV / 	TV/DTV
INFO	INFO
EPG	EPG
	 / SMART
RED / F1	RED
GREEN / F2	GREEN
YELLOW / F3	YELLOW
BLUE / F4	BLUE

