



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
DISPLAY	
ASPECT	
SOUND	
TV/TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TUNER	TV/DTV
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
PICTURE	/ NET TV
FREEZE	/ SMART VIDEO
RED / TITLE	RED
GREEN / GOTO	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
NICAM/A2	SHIFT+MUTE
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
R.LIST	SHIFT+EPG
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

