



A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button with a speaker icon. Below these are four function buttons: TV, SAT, DVD, and AUX. The next row contains MENU, EXIT, and SHIFT buttons. A numeric keypad (1-9, 0, and a slash/underscore key) follows. Below the numbers are TV/AV, PVR, SIZE, and SETUP buttons. The center features a directional pad with an OK button in the middle, flanked by +V, P+, V-, and P- buttons. Below the pad are BACK, SLEEP, TV/DTV, INFO, EPG, and FAV buttons. The next row includes a red NET TV button, an II (pause) button, and a SMART button. The bottom row consists of a red power button, a green left arrow, a yellow right arrow, and a blue double right arrow. The brand name 'SUPERIOR' and '4 in 1' are printed at the bottom.