



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
LCD MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
+10 / -/--	-/--
P. MODE	
S. MODE	
TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TITLE / LANG	INFO
EPG / D. DISP.	EPG
FAV / HOLD	FAV

ORIGINAL	SUPERIOR
RED / PROGRAM	RED
GREEN / MENU	GREEN
YELLOW / REPEAT	YELLOW
BLUE / AB	BLUE
NICAM / AUDIO	SHIFT+MUTE
DVD SETUP / PIC. FORMAT	SHIFT+MENU
REVEAL / ZOOM	SHIFT+
SIZE	SHIFT+
SUBTITLE / SUBPAGE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
FAV+ / ANGLE	SHIFT+UP
FAV - / GOTO	SHIFT+DOWN
INDEX	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

