



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
SYS-MENU	MENU
SYS-EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
SIZE / ANGLE	
DVD-SETUP	
TEXT	
VOL -/+	VOL -/+
CH -/+	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DVB	TV/DTV
EPG	EPG
FAV	FAV
PIC. FORMAT	/ NET TV

ORIGINAL	SUPERIOR
HOLD / MENU	/ SMART
RED / PROGRAM	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
NICAM / A2	SHIFT+MUTE
CANCEL / ZOOM	SHIFT+EXIT
PICTURE	SHIFT+1
SOUND	SHIFT+2
DVD	SHIFT+
REVEAL / SUBTITLE	SHIFT+
LANGUAGE	SHIFT+
TV/TXT / LANGUAGE	SHIFT+
SUBTITLE	SHIFT+
SUBPAGE / TITLE	SHIFT+DOWN
FAV -/+	SHIFT+ LEFT/RIGHT
SKIP PREV. / NEXT	SHIFT+ P-/+
TV / RADIO	SHIFT+ TV/DTV
INDEX / GO TO	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

