



| ORIGINAL            | SUPERIOR         |
|---------------------|------------------|
|                     | <b>POWER</b>     |
| <b>MUTE</b>         | <b>MUTE</b>      |
| <b>MENU</b>         | <b>MENU</b>      |
| <b>EXIT</b>         | <b>EXIT</b>      |
| <b>1/2/3/4/5</b>    | <b>1/2/3/4/5</b> |
| <b>6/7/8/9/0</b>    | <b>6/7/8/9/0</b> |
| <b>TV / AV</b>      | / <b>SOURCE</b>  |
| <b>-/--</b>         | <b>-/--</b>      |
| <b>DISPLAY</b>      |                  |
| <b>PIC. FORMAT</b>  |                  |
| <b>TEXT</b>         |                  |
| <b>TV / TXT</b>     |                  |
| <b>VOL+ / RIGHT</b> | <b>VOL+</b>      |
| <b>VOL - / LEFT</b> | <b>VOL -</b>     |
| <b>CH+ / UP</b>     | <b>P+</b>        |
| <b>CH - / DOWN</b>  | <b>P -</b>       |
| <b>UP</b>           | <b>UP</b>        |
| <b>DOWN</b>         | <b>DOWN</b>      |
| <b>LEFT</b>         | <b>LEFT</b>      |
| <b>RIGHT</b>        | <b>RIGHT</b>     |
| <b>OK</b>           | <b>OK</b>        |
|                     | <b>BACK</b>      |
| <b>SLEEP</b>        | <b>SLEEP</b>     |
| <b>DVB</b>          | <b>TV/DTV</b>    |
| <b>INDEX</b>        | <b>INFO</b>      |

| ORIGINAL               | SUPERIOR             |
|------------------------|----------------------|
| <b>EPG</b>             | <b>EPG</b>           |
| <b>FAV</b>             | <b>FAV</b>           |
| <b>HOLD</b>            | / <b>SMART</b>       |
| <b>RED</b>             | <b>RED</b>           |
| <b>GREEN</b>           | <b>GREEN</b>         |
| <b>YELLOW</b>          | <b>YELLOW</b>        |
| <b>BLUE</b>            | <b>BLUE</b>          |
| <b>NICAM / A2</b>      | <b>SHIFT+MUTE</b>    |
| <b>CANCEL</b>          | <b>SHIFT+EXIT</b>    |
| <b>PICTURE</b>         | <b>SHIFT+1</b>       |
| <b>SOUND</b>           | <b>SHIFT+2</b>       |
| <b>REVEAL</b>          | <b>SHIFT+</b>        |
| <b>SIZE</b>            | <b>SHIFT+</b>        |
| <b>LANGUAGE</b>        | <b>SHIFT+</b>        |
| <b>SUBTITLE</b>        | <b>SHIFT+</b>        |
| <b>FAV -</b>           | <b>SHIFT+LEFT</b>    |
| <b>FAV+</b>            | <b>SHIFT+RIGHT</b>   |
| <b>SUBPAGE</b>         | <b>SHIFT+DOWN</b>    |
| <b>SKIP PREV./NEXT</b> | <b>SHIFT+ P -/+</b>  |
| <b>TV / RADIO</b>      | <b>SHIFT+ TV/DTV</b> |
| <b>STOP</b>            | <b>SHIFT+</b>        |
| <b>REC</b>             | <b>SHIFT+RED</b>     |
| <b>REW</b>             | <b>SHIFT+GREEN</b>   |
| <b>PLAY / PAUSE</b>    | <b>SHIFT+YELLOW</b>  |
| <b>FWD</b>             | <b>SHIFT+BLUE</b>    |

