



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
PICTURE FORMAT	
DVB	
TV/TXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TXT	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
PICTURE	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
NICAM	SHIFT+1
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
FAV -	SHIFT+LEFT
FAV+	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
RADIO	SHIFT+TV
LANGUAGE	SHIFT+FAV
REW	SHIFT+GREEN
FWD	SHIFT+BLUE
PAUSE	SHIFT+
STOP	SHIFT+

