



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ INPUT	/ SOURCE
i / DISPLAY	
/ HOLD	
PIC FORMAT	
/ TV/TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ OK	OK
/ RETURN	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
/ INDEX	INFO
/ EPG	EPG

ORIGINAL	SUPERIOR
/ FAV	FAV
/ PICTURE	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I-II / NICAM/A2	SHIFT+MUTE
/ CANCEL	SHIFT+EXIT
/ SOUND	SHIFT+1
/ REVEAL	SHIFT+
/ SIZE	SHIFT+
ENG. / LANGUAGE	SHIFT+
/ SUBTITLE	SHIFT+
/ SUBPAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FF	SHIFT+BLUE

