



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
SIZE	
TEXT	
TV / TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
PICTURE	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
NICAM / A2	SHIF+MUTE
SUBPAGE	SHIFT+MENU
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+
PIC. FORMAT	SHIFT+
SOUND	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT + P+
SKIP PREV	SHIFT+ P -
FAV+	SHIFT+UP
FAV-	SHIFT+DOWN
DVB	SHIFT+TV/DTV
LANGUAGE	SHIFT+FAV
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

