



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
TV – MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ SOURCE
-/--	-/--
DISPLAY	
SIZE / ANGLE	
DVD-SETUP	
TV/TXT / LANGUAGE	
VOL +/-	VOL +/-
CH +/-	P +/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO
EPG	EPG
FAV LIST	FAV

ORIGINAL	SUPERIOR
QUICK START	/ NET TV
FREEZE	/ SMART TUBE
HOLD / MENU	/ SMART VIDEO
RED / PROGRAM	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
I/II	SHIFT+MUTE
CANCEL / ZOOM	SHIFT+EXIT
PICTURE	SHIFT+1
SOUND	SHIFT+2
REVEAL / SUBTITLE	SHIFT+
ZOOM	SHIFT+
SUBTITLE	SHIFT+
SUBPAGE / TITLE	SHIFT+DOWN
SKIP NEXT FAV	SHIFT+RIGHT
SKIP PREV /NEXT	SHIFT+ P +/-
TIME	SHIFT+SLEEP
INDEX / GO TO	SHIFT+INFO
FAV ADD	SHIFT+FAV
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

