



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
TV-MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
DISPLAY	
TEXT / AUDIO	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RADIO / MENU	TV/DTV
INFO / TITLE	INFO
EPG / PROGRAM	EPG
FAV	FAV
ASPECT	

ORIGINAL	SUPERIOR
HOLD / A-B / REC LIST	
RED / REPEAT	RED
GREEN / ZOOM	GREEN
YELLOW / ANGLE	YELLOW
BLUE / GO TO	BLUE
NICAM	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
DVD-SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
SLOW	SHIFT+LEFT
SUBPAGE	SHIFT+DOWN
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
TIME SHIFT	SHIFT+SLEEP
INDEX	SHIFT+INFO
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

