



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
LCD MENU	MENU
EXIT / DVD SETUP	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/AV	/ SOURCE
-/--	-/--
DISPLAY	
SIZE / TXT HOLD	
PICTURE MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV / GO TO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG OSD	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
ANGLE - I/II	SHIFT+1
A - B	SHIFT+2
SUBTITLE	SHIFT+
FAV+ / PAGE+	SHIFT+UP
FAV -/ PAGE -	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT / TXT REVEAL	SHIFT+BACK
TITLE	SHIFT+INFO
LANGUAGE	SHIFT+FAV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

