



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
OPTIONS	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
LIST	-/--
DISP	
SETUP	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
APP	SLEEP
TV / 	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
	FAV
	/ NET TV
VOD	/ SMART TUBE
	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
PIP	SHIFT+
	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

