



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1 / SELECT	1
2 / SELECT ALL	2
3/4/5/6/7	3/4/5/6/7
8 / REFRESH	8
9	9
0 / SLEEP	0
DEVICE	 / SOURCE
SEARCH	-/--
SCR. SIZE	
SETUP	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / SLOW	BACK
TV OUT	TV/DTV

ORIGINAL	SUPERIOR
INFO	INFO
BRT. CONT.	EPG
./ / BOOKMARK	FAV
STOP	 / SMART
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
MUSIC	SHIFT+1
MOVIE	SHIFT+2
PHOTO	SHIFT+3
ALL MEDIA	SHIFT+4
ANGLE	SHIFT+ 
REPEAT	SHIFT+BACK
A-B REPEAT	SHIFT+SLEEP
TITLE	SHIFT+INFO

