



www.man2.es

info@man2.es

Tel. +34 699 387 926

A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button. Below these are four function buttons: TV, SAT, DVD, and AUX. The next row contains MENU, EXIT, and SHIFT. A numeric keypad (1-9, 0, and a slash/underscore key) follows. Below the numbers are TV/AV, PVR, SIZE, and SETUP buttons. The center features a directional pad with an OK button in the middle, flanked by +V, P+, -V, and P- buttons. Below the pad are BACK, SLEEP, TV/DTV, INFO, EPG, and FAV buttons. The bottom section includes a red NET TV button, a pause button (II), a SMART button, and four colored navigation buttons (red, green, yellow, blue) with directional arrows. The brand name 'SUPERIOR' and '4 in 1' are printed at the bottom.